

Low Temperature Sensor

Indoor sensor

General information

The low temperature sensor can be placed up to 2000 feet away from the tattletale depending on structures and objects in-between the detector and the tattletale. This sensor is designed to trigger an alarm if the ambient temperature reaches 43 degrees Fahrenheit or 6.1 degrees Celsius. The transmitter will continue to send an alarm signal until the ambient temperature returns above 43°F. The 3.0V Lithium battery that is included will typically last for 2-3 years.



Use up to 16 indoor sensors for each tattletale alarm unit.

Install the battery

- Using a small screwdriver, or a key, carefully insert the tool into the slot on one of the short ends of the sensor and pry open the case.
- Insert the battery with the negative end of the battery near the outside.
- Press the reset button located next to the three metal pins, in the corner of the sensor.
- Replace the cover on the sensor.

Setup instructions

Note the zone number on the label of each accessory and the location where you are mounting them. Write this down. You can call tattletale Activations at [888-835-5668](tel:888-835-5668) to add this information to your account.

Mount the sensor

Place the sensor in the area that you want to monitor. For optimum performance be sure that the airflow around the sensor is unobstructed. Use the Velcro Dual Lock adhesive to mount the sensor.

Testing the sensor

To test the low temperature sensor place it in a freezer and wait for the corresponding zone light to flash. Remove the sensor from the freezer. The corresponding zone light should go out. Remount the sensor in the area you want to protect.



**Protect Anything.
Anytime.
Anywhere.**