
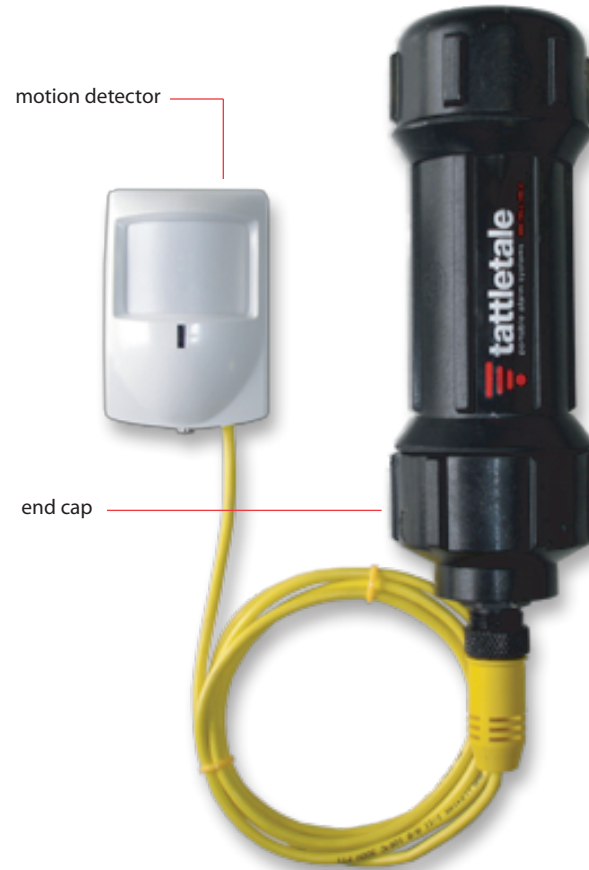


Storage Container Motion Detector

General information

Specifically designed for metal containers, the Storage Container Motion Detector uses a tethered transmitter to allow placement outside the metal container. This ensures a strong signal to the base station, up to 2000ft away depending on structures between the **tattletale™** and the motion detector. The motion detector is highly sensitive to moving heat (infrared radiation) and has a coverage area of 45' by 90°. It can operate normally between 0°F and 120°F. The 3.0V Lithium Battery that is included will typically last for 2-3 years.

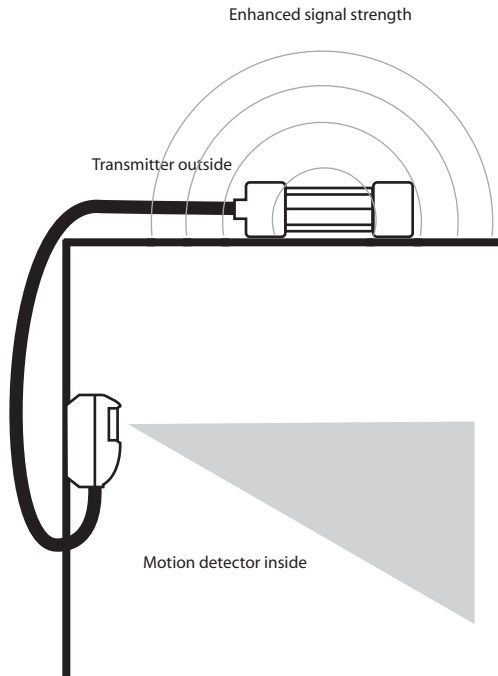

Use up to 16 sensors for each **tattletale™** alarm unit.

Mounting instructions

- Locate motion detector: for best detection, locate the motion so that intruders move across its view, rather than directly towards it.
- Mount the detector to the INSIDE container wall with velcro supplied.
- Drill a 1 1/8" diameter hole through the container wall
- Pass the cordset through the hole in the container.
- Thread the cordset to the bottom of the transmitter.
- Place transmitter OUTSIDE on top of container.

Changing the battery

If there is a rapidly flashing light on the **tattletale™** alarm unit that corresponds to the zone of your Container Sensor then you should check the battery. To change the battery:

- Unscrew endcap of black tube.
- Using a flat bladed screw driver pry open the transmitter.
- Remove the battery and replace with new one. (model# CR123A)
- PRESS THE WHITE RESET BUTTON NEXT TO THE BATTERY.
- DO NOT DISCONNECT ANY WIRES.
- Replace the cover
- Replace the end cap on the black tube and test the motion detector – follow steps listed below.

To test the motion detector

- Mount it in an appropriate location and make sure that it is not in "sleep mode" (see note below).
- It is usually easiest to unplug the **tattletale™** from power and take it out to where the outdoor motion is located so you can watch the zone light on the **tattletale™** as you test the outdoor motion.
- Make sure the **tattletale™** has been plugged in for at least 3 hours so that it will hold a charge.
- While holding the **tattletale™**, walk in the path of the outdoor motion and watch the corresponding zone light on the **tattletale™** to make sure that the outdoor motion picks you up. In this way, you can also check to make sure that the outdoor motion does not pick up areas that you do not want to protect (i.e. outside of the fence line).

IMPORTANT: The way that the outdoor motion detector preserves battery life for 2-3 years is by going into a "sleep mode" for 3 minutes every time it senses motion. For this reason, it is very likely that if the motion detector does not appear to be working, it is

Protect Anything.
Anytime.
Anywhere.

